


HOME DECORATORS COLLECTION

BF-23034 HARWICK COLLECTION 4+2 CREDENZA

INV#54421













ASSEMBLY INSTRUCTIONS









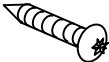
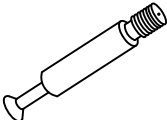


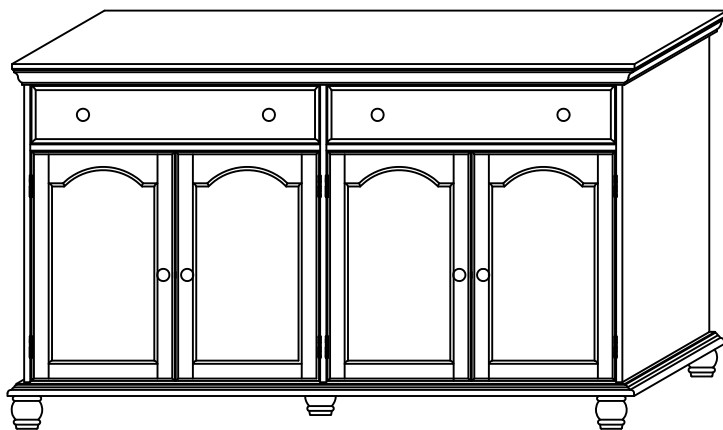



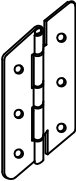

Made In China





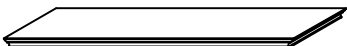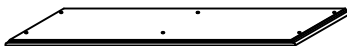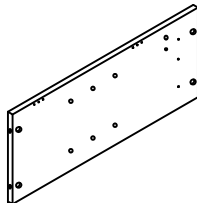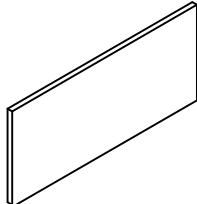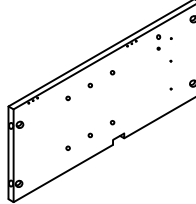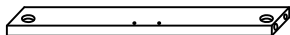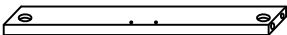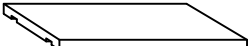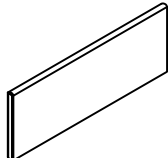
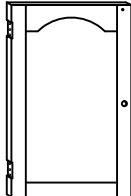
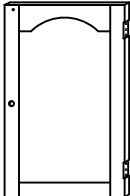
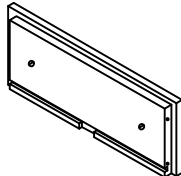


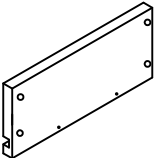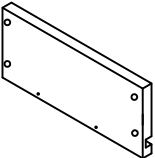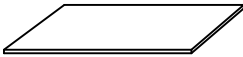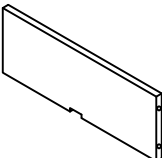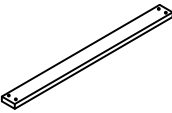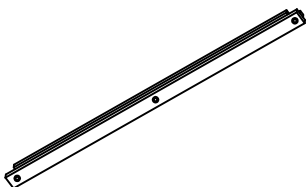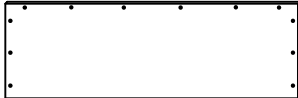
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.



PARTS LIST		
<p>A</p>  <p>TOP PANEL-1PC</p>	<p>B</p>  <p>BOTTOM PANEL-1PC</p>	<p>C</p>  <p>LEFT SIDE PANEL-1PC</p>
<p>D</p>  <p>RIGHT SIDE PANEL-1PC</p>	<p>E</p>  <p>STAND PANEL-1PC</p>	<p>F</p>  <p>LEFT ACROSS PANEL-1PC</p>
<p>G</p>  <p>RIGHT ACROSS PANEL-1PC</p>	<p>H</p>  <p>SHELVES-2PCS</p>	<p>I</p>  <p>DRAWER PANEL MIDDLES-2PCS</p>
<p>J</p>  <p>RIGHT DOORS-2PCS</p>	<p>K</p>  <p>LEFT DOOR-2PCS</p>	<p>L</p>  <p>DRAWER PANEL FRONTS-2PCS</p>
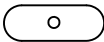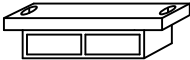
<p>M</p>  <p>LEFT DRAWER PANEL SIDES-2PCS</p>	<p>N</p>  <p>RIGHT DRAWER PANEL SIDES-2PCS</p>	<p>O</p>  <p>DRAWER PANEL BOTTOMS-2PCS</p>
<p>P</p>  <p>DRAWER PANEL BACKS-2PCS</p>	<p>Q</p>  <p>DRAWER SUPPORTS-2PCS</p>	<p>R</p>  <p>REAR PANEL GUIDE-1PC</p>
<p>S</p>  <p>BACK PANELS-2PCS</p>	<p>T</p>  <p>FEET-5PCS</p>	<p>U</p> <p>7mm × 19/32"</p>  <p>SCREWS-36PCS</p>
<p>V</p>  <p>CAM-BOLTS-16PCS</p>	<p>W</p>  <p>CAM-LOCKS-16PCS</p>	<p>X</p>  <p>SHELF SUPPORTS-8PCS</p>
<p>Y</p> <p>6mm × 1"</p>  <p>SCREWS-27PCS</p>	<p>Z</p>  <p>SCREWS-4PCS</p>	<p>A1</p> <p>11mm × 3/4"</p>  <p>SCREWS-8PCS</p>
<p>B1</p>  <p>KNOBS-8PCS</p>	<p>C1</p>  <p>HINGES-8PCS</p>	<p>D1</p> <p>5mm × 3/8"</p>  <p>SCREWS-52PCS</p>
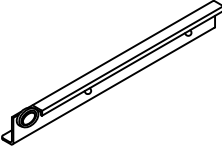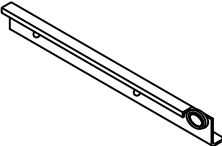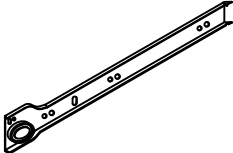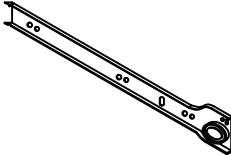
<p>E1</p>  <p>FEMALE MAGNETS-4PCS</p>	<p>F1</p>  <p>LARGE MAGNETS-2PCS</p>	<p>G1</p>  <p>CAM-T00L-1PC</p>
<p>H1</p>  <p>ALLEN WRENCH-1PC</p>	<p>I1</p>  <p>LEFT INNER SLIDERS-2PCS</p>	<p>J1</p>  <p>RIGHT INNER SLIDERS-2PCS</p>
<p>K1</p>  <p>LEFT OUTER SLIDERS-2PCS</p>	<p>L1</p>  <p>RIGHT OUTER SLIDERS-2PCS</p>	<p>M1</p> <p>6mm × 3/8"</p>  <p>SCREWS-28PCS</p>




REMARK: THE LETTER STICKED IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

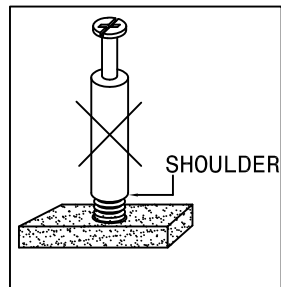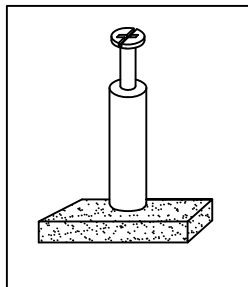


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

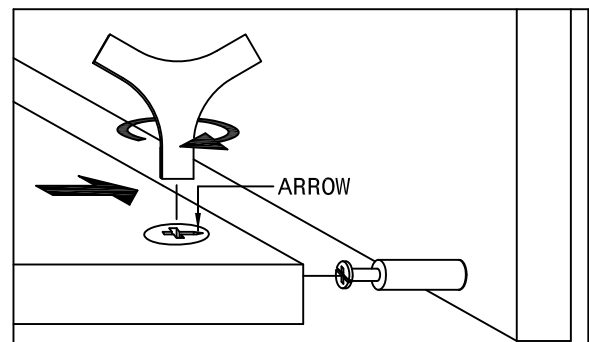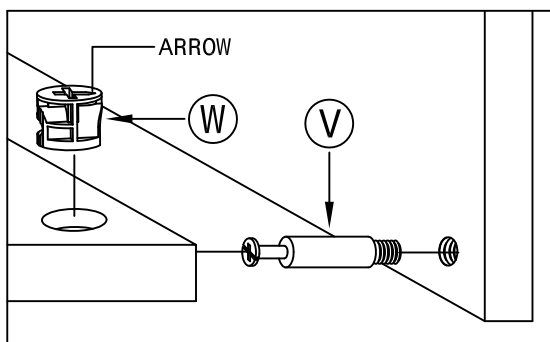


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

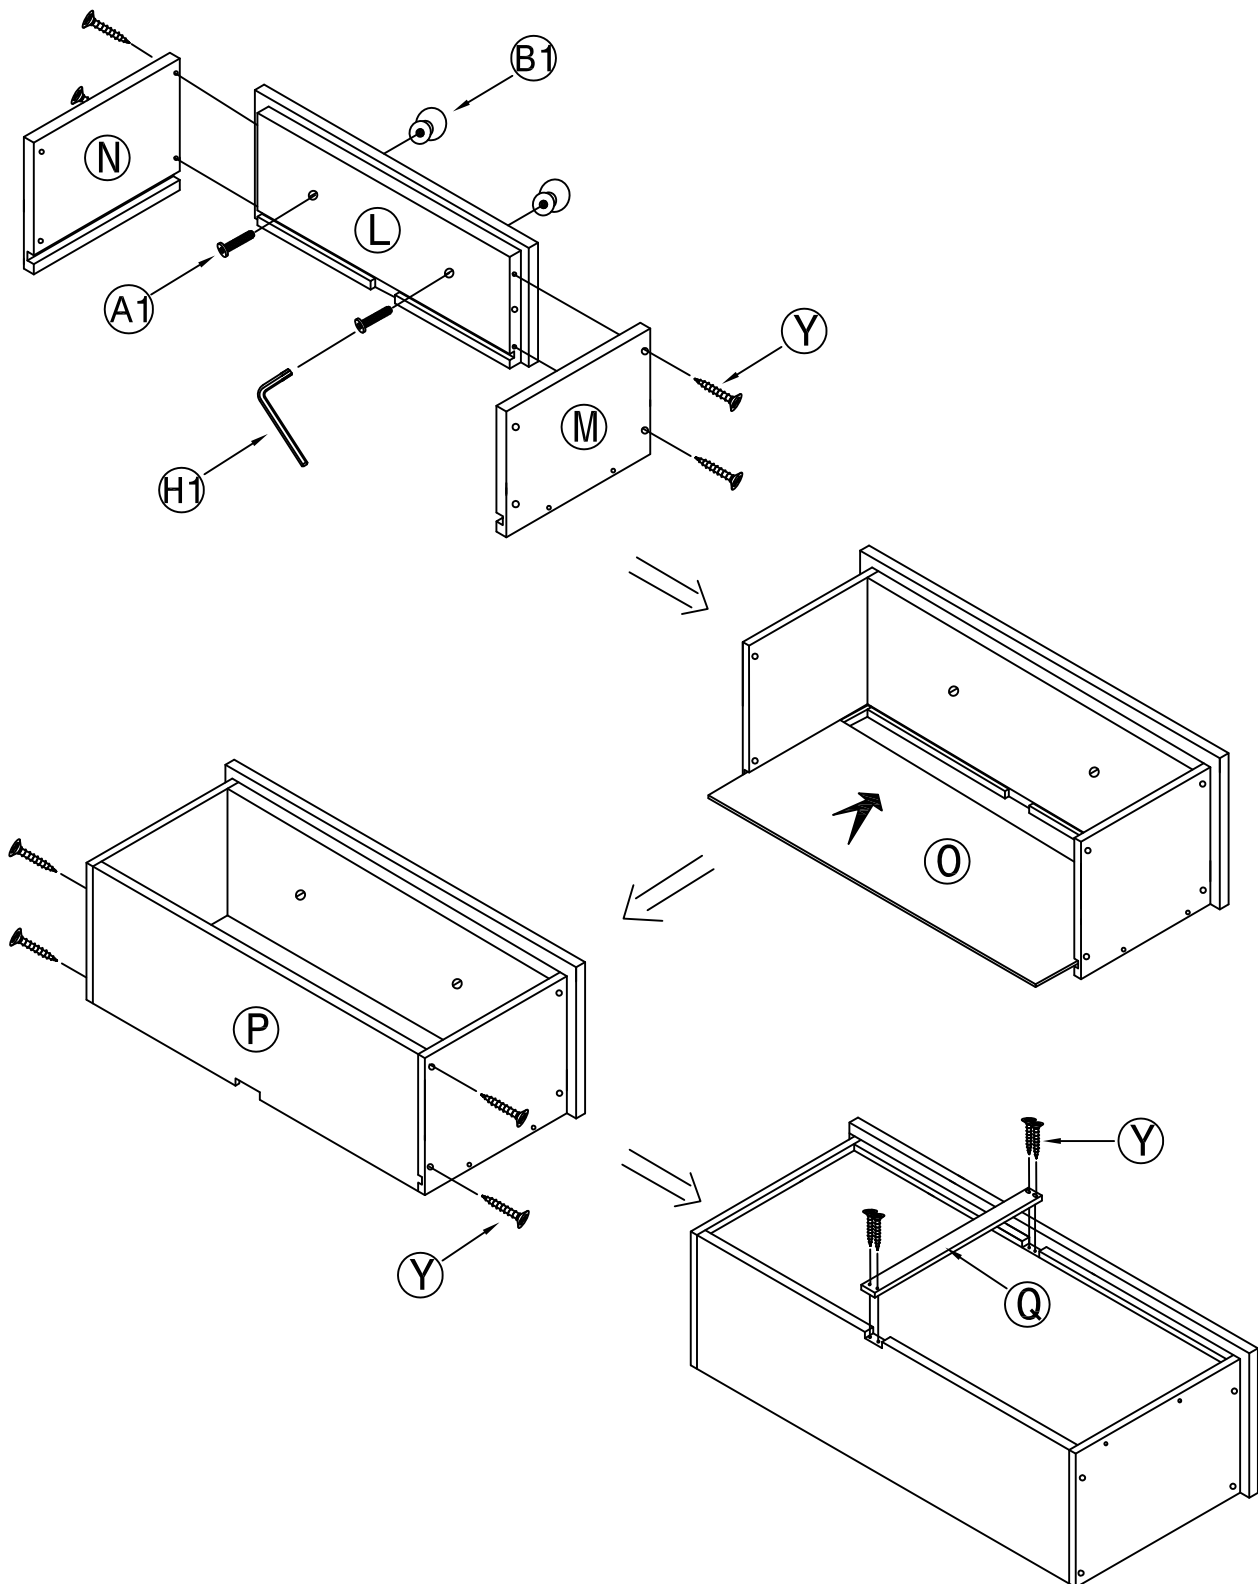


1) . ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER SIDE PANEL(M/N) TO DRAWER PANEL FRONT(L) USING 4 SCREWS(Y) .
- ATTACH THE KNOBS(B1) TO DRAWER PANEL FRONT(L) USING 2 SCREWS(A1) .
- INSERT THE DRAWER PANEL BOTTOM(O) INTO SLOTS IN DRAWER SIDE PANELS(M/N) .
- ATTACH THE DRAWER PANEL BACK(P) TO DRAWER SIDE PANEL(M/N) USING 4 SCREWS(Y) .
- ATTACH DRAWER SUPPORTS(Q) TO DRAWER CUT-OUT USING 4 SCREWS(Y) .

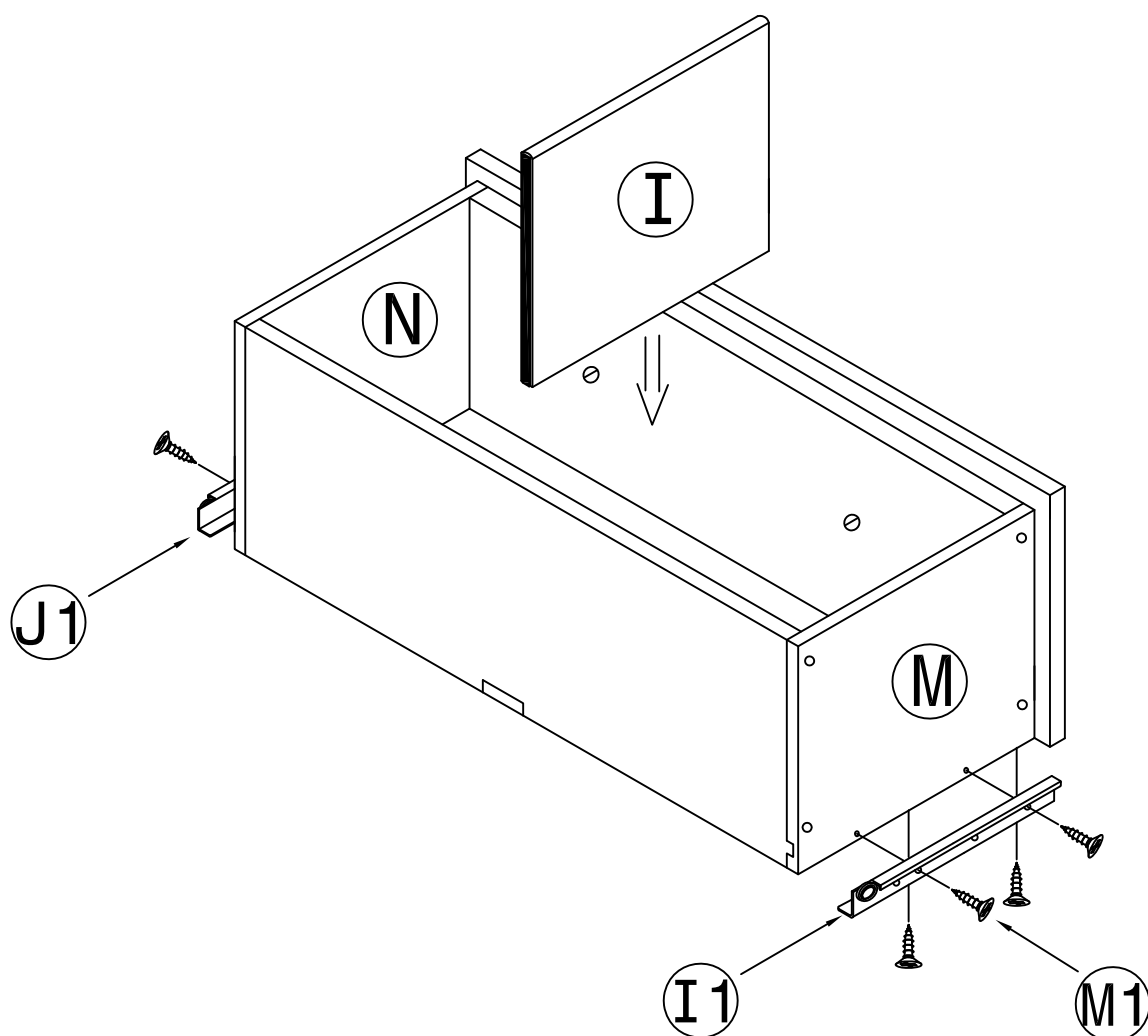


2) . ASSEMBLE THE DRAWER.

- INSERT THE DRAWER PANEL MIDDLE(I) INTO THE DRAWER CABINET.
- ATTACH THE INNER SLIDER(I1/J1) TO SIDE DRAWER PANEL(M/N) USING 8 SCREWS(M1) .

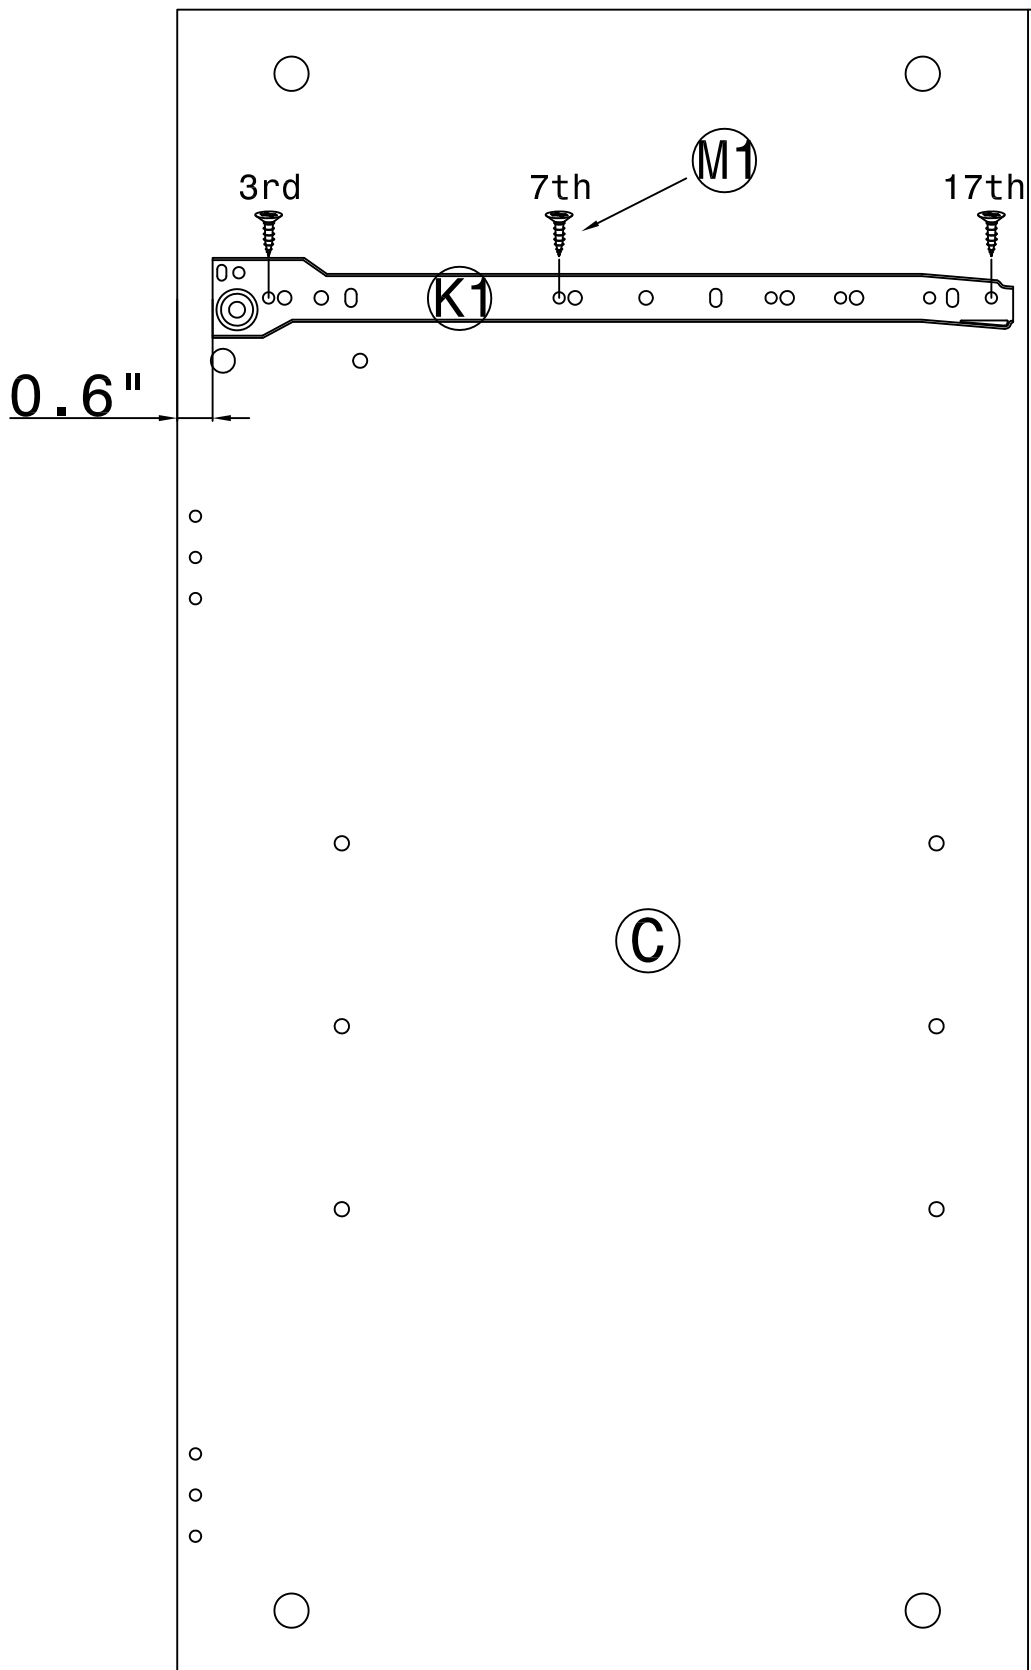


3) . ASSEMBLE THE OUTER SLIDE(K1) .

- ATTACH THE OUTER SLIDE(K1) TO LEFT SIDE PANEL(C) USING 3 SCREWS(M1) .

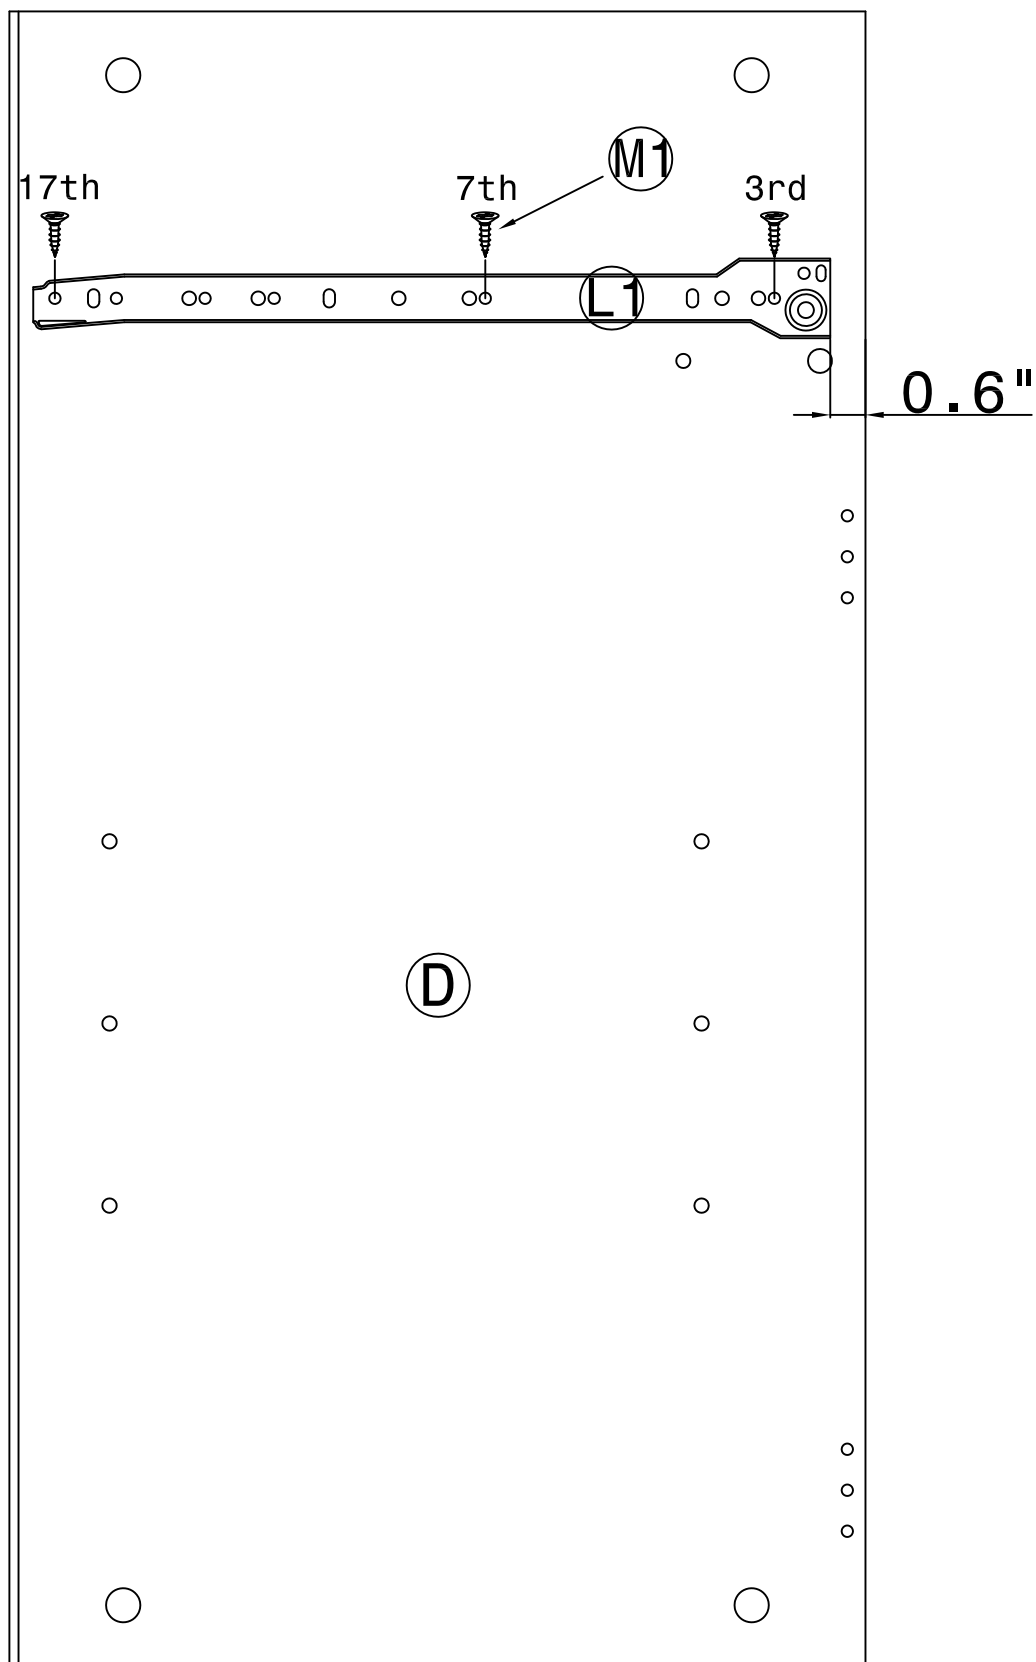


4) . ASSEMBLE THE OUTER SLIDE(L1).

- ATTACH THE OUTER SLIDE(L1) TO RIGHT SIDE PANEL(D) USING 3 SCREWS(M1).

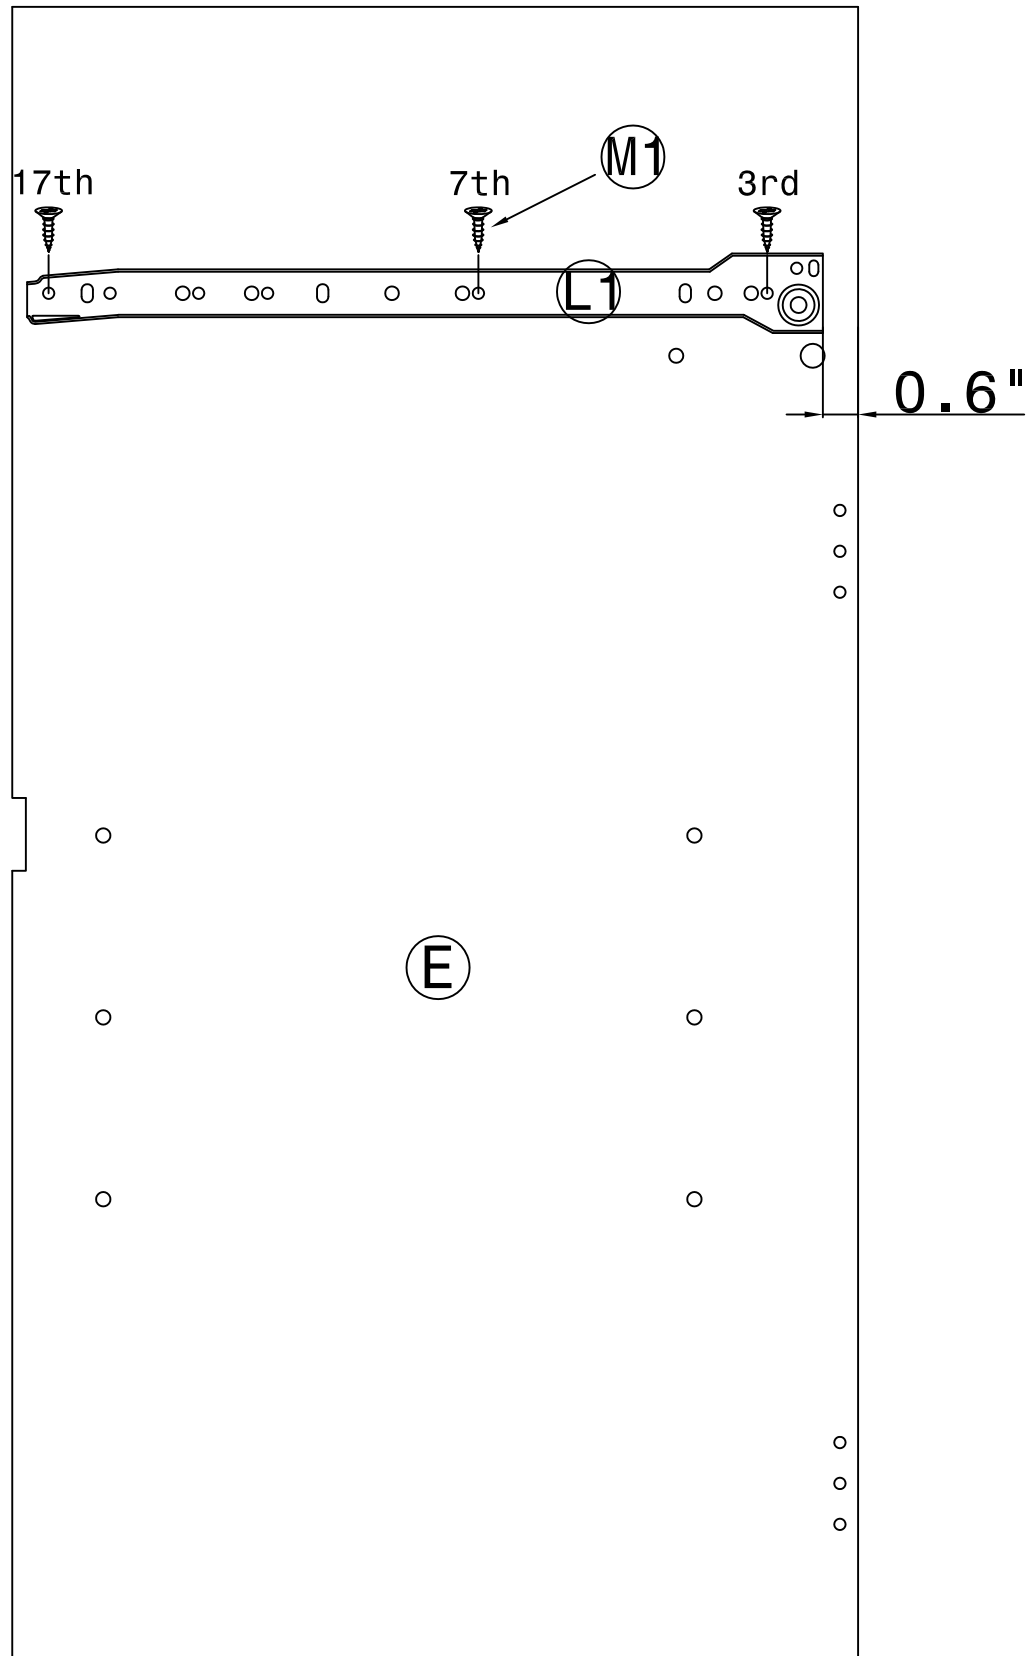


5) . ASSEMBLE THE OUTER SLIDE (L1) .

- ATTACH THE OUTER SLIDE (L1) TO STAND PANEL (E) USING 3 SCREWS (M1) .

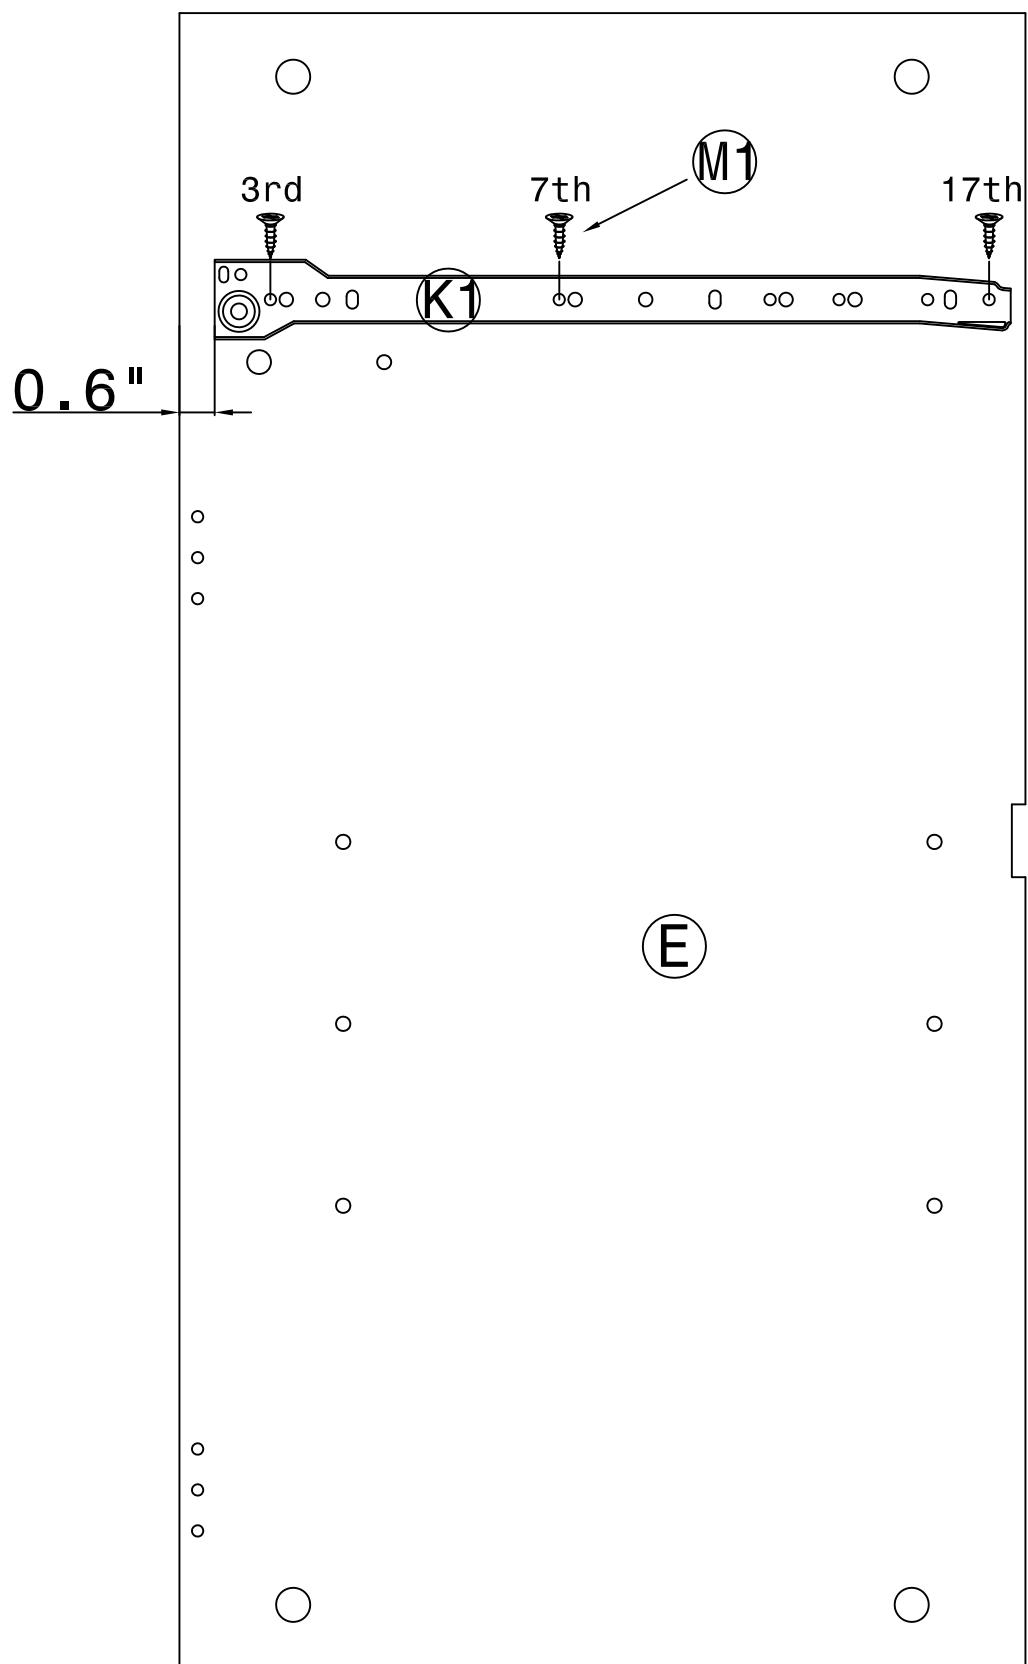


6) . ASSEMBLE THE OUTER SLIDE(K1) .

- ATTACH THE OUTER SLIDE(K1) TO STAND PANEL(E) USING 3 SCREWS(M1) .

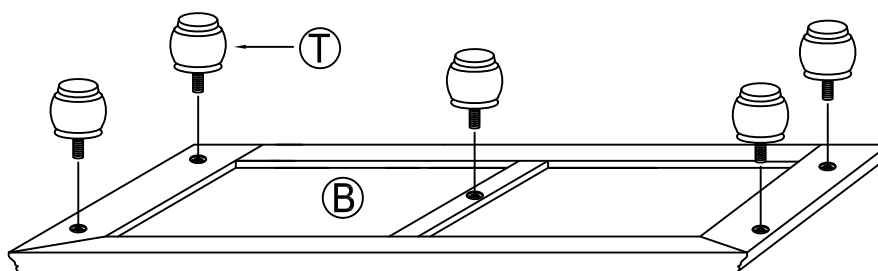


7) . ASSEMBLE FEET (T) .

- ROTATE THE 5 FEET (T) INTO THE HOLES IN THE BOTTOM PANEL (B) .

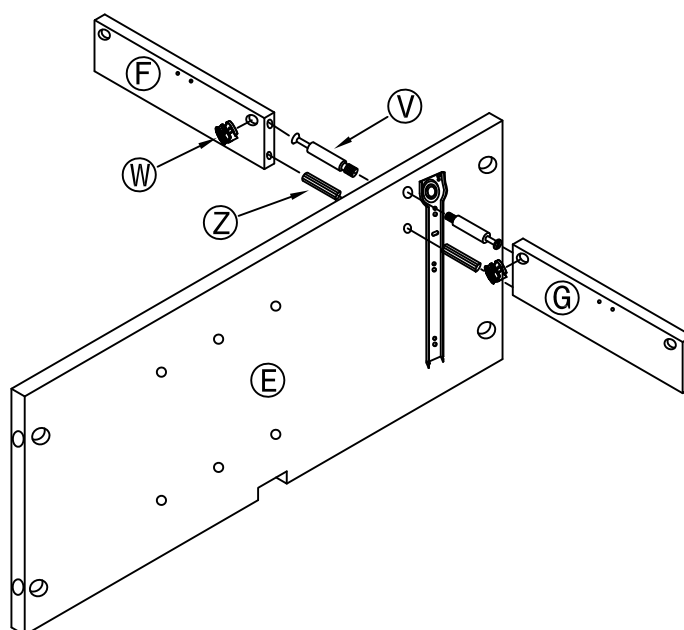


8) . ASSEMBLE STAND PANEL (E) .

- INSERT THE 2 DOWELS (Z) INTO THE HOLES IN THE ACROSS PANEL (F/G) .
- ROTATE THE 2 CAM-BOLTS (V) INTO THE HOLES IN THE STAND PANEL (E) .
- PLACE CAM-BOLTS (V) INTO THE HOLES IN THE PANEL (F/G) AND ATTACH USING 2 CAM-LOCKS (W) .

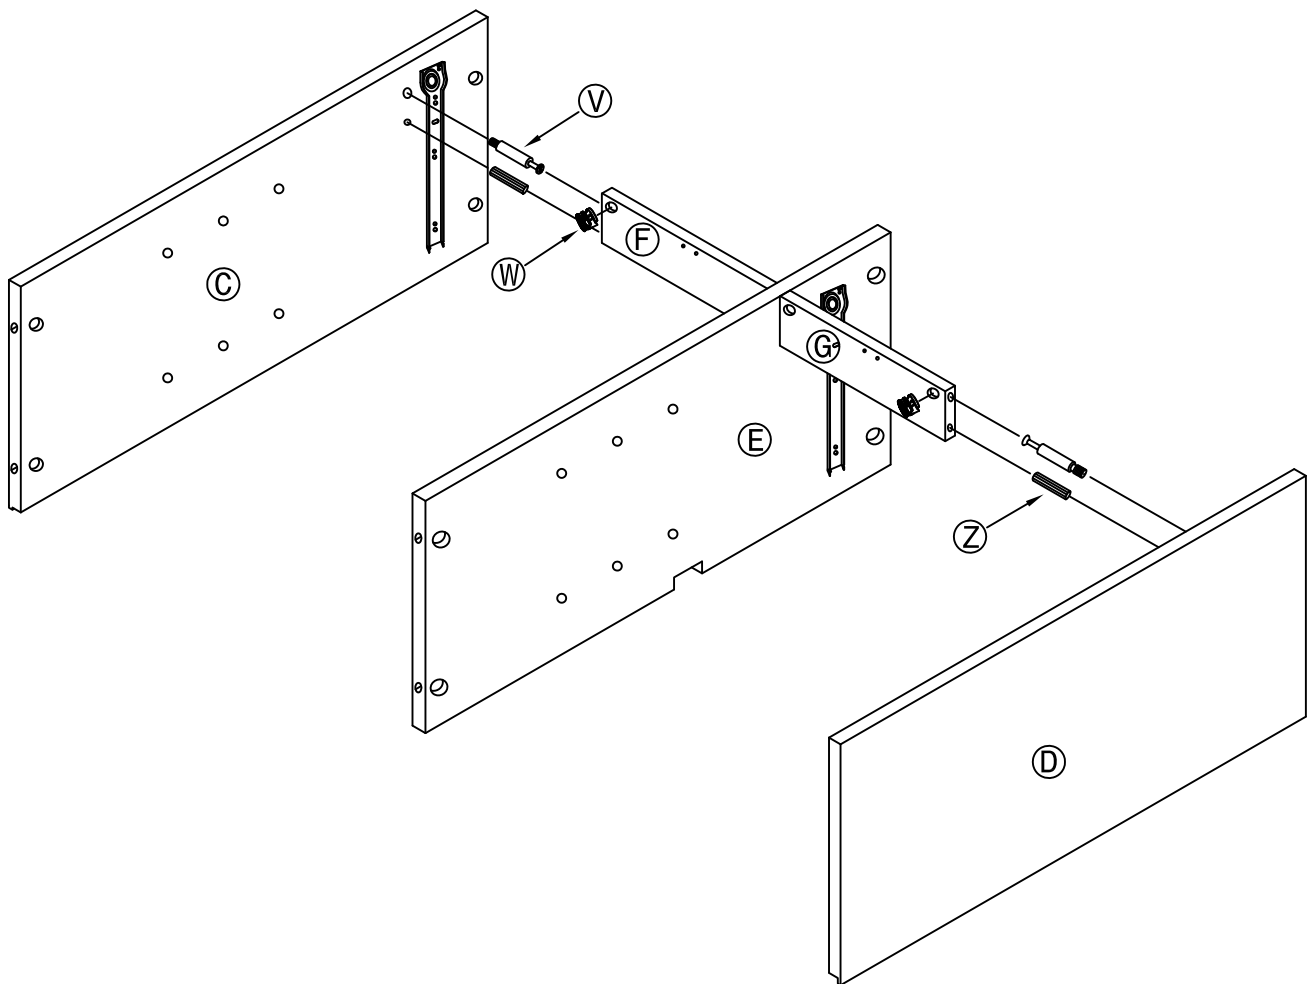

9) . ASSEMBLE SIDE PANEL(C/D) .


- INSERT THE 2 DOWELS(Z) INTO THE HOLES IN THE ACROSS PANEL(F/G) .
- ROTATE THE 2 CAM-BOLTS(V) INTO THE HOLES IN THE SIDE PANEL(C/D) .
- PLACE CAM-BOLTS(V) INTO THE HOLES IN THE PANEL(F/G) AND ATTACH USING 2 CAM-LOCKS(W) .

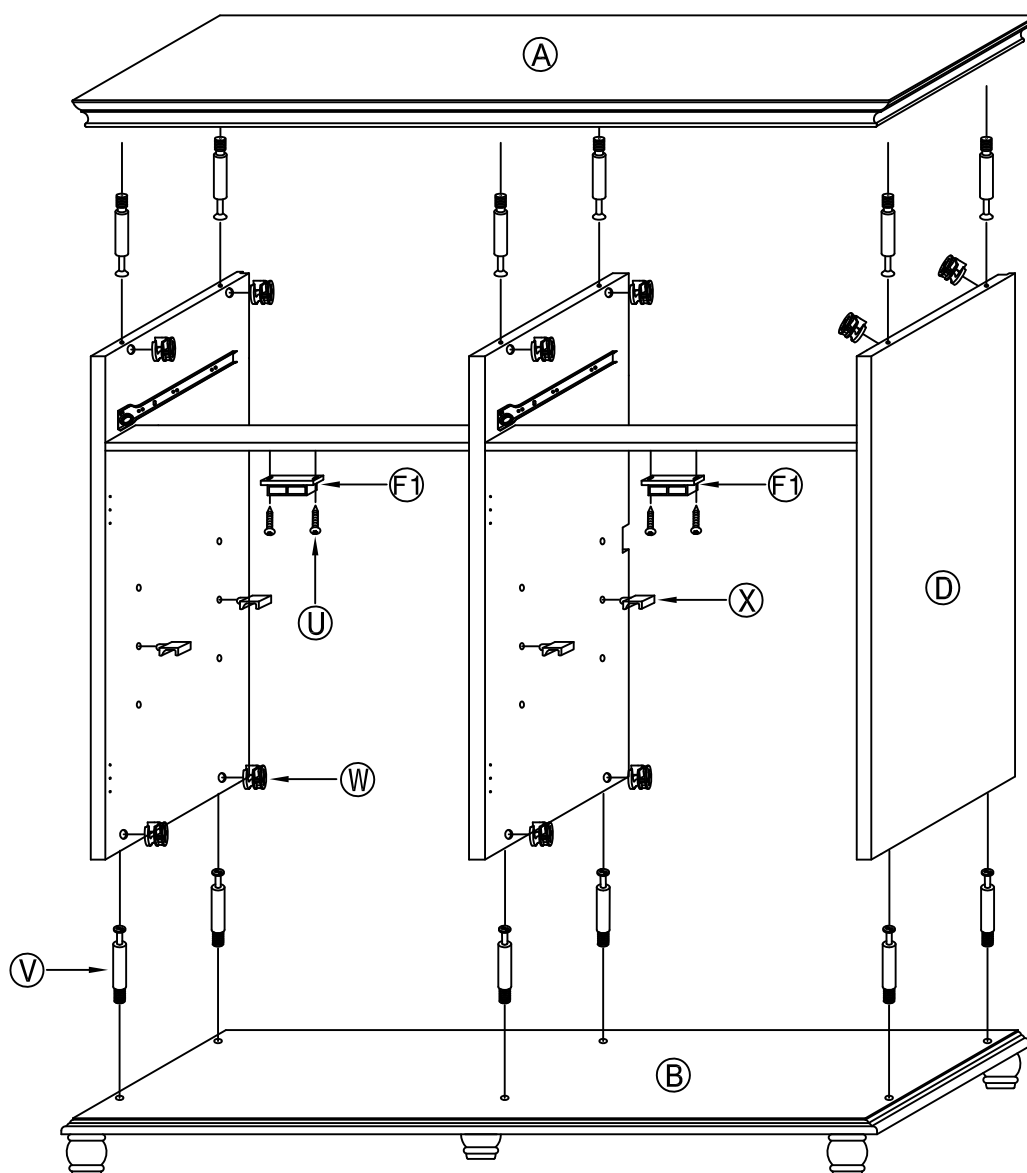

10) .ASSEMBLE THE TOP/BOTTOM PANEL(A/B) .

- ROTATE THE 12 CAM-BOLTS(V) INTO THE HOLES IN THE TOP/BOTTOM PANEL(A/B) .
- PLACE CAM-BOLTS(V) INTO THE HOLES IN THE PANEL(C/D/E) AND ATTACH USING 12 CAM-LOCKS(W) .
- ATTACH 2 LARGE MAGNETS(F1) TO ACROSS PANEL(F/G) USING 4 SCREWS(U) .
- INSERT THE 8 SHELF SUPPORTS(X) INTO THE HOLES IN THE SIDE/STAND PANEL(C/D/E) .


NOTE: (Attach the doors(J/K) by the same method as the door(K) with the hinge and screws.

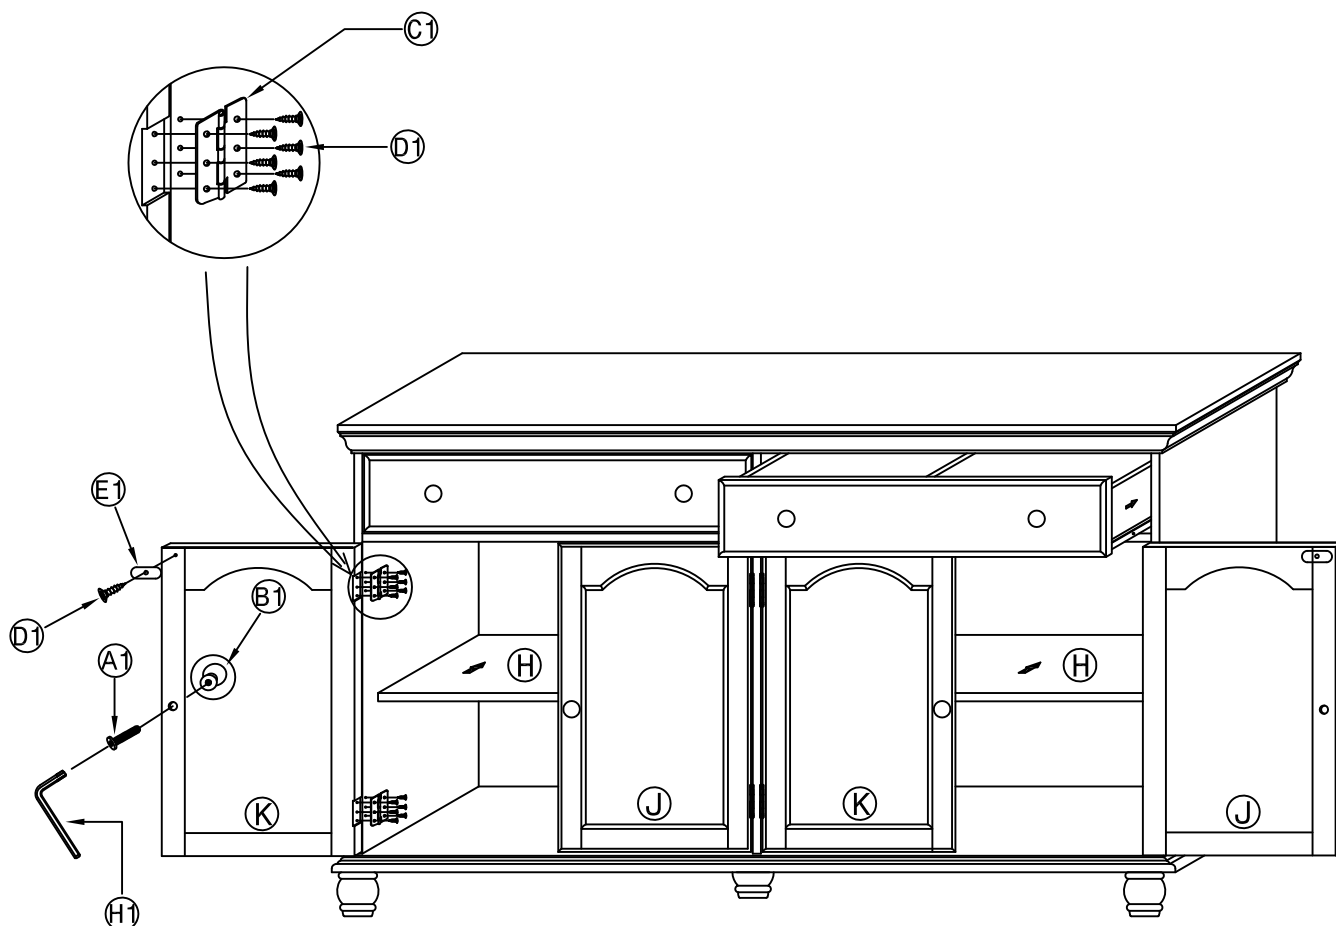

11) ASSEMBLE THE DOORS AND DRAWER.

- ATTACH 2 HINGES(C1) TO LEFT DOOR(K) AND LEFT SIDE PANEL(C) USING 12 SCREWS(D1).
- ATTACH THE KNOB(B1) TO LEFT DOOR(K) USING 1 SCREW(A1).
- ATTACH THE FEMALE MAGNETS(E1) TO LEFT DOOR(K) USING 1 SCREW(D1).
- PUT THE 2 SHELVES(H) ONTO SHELF SUPPORTS(X).
- FINALLY, SLIDE ALL THE DRAWERS INTO THE SLIDERS.

Note: Before you assemble the back panel, please make sure the doors have an even gap around them. If uneven, shift the unit left or right until the doors are evenly spaced.

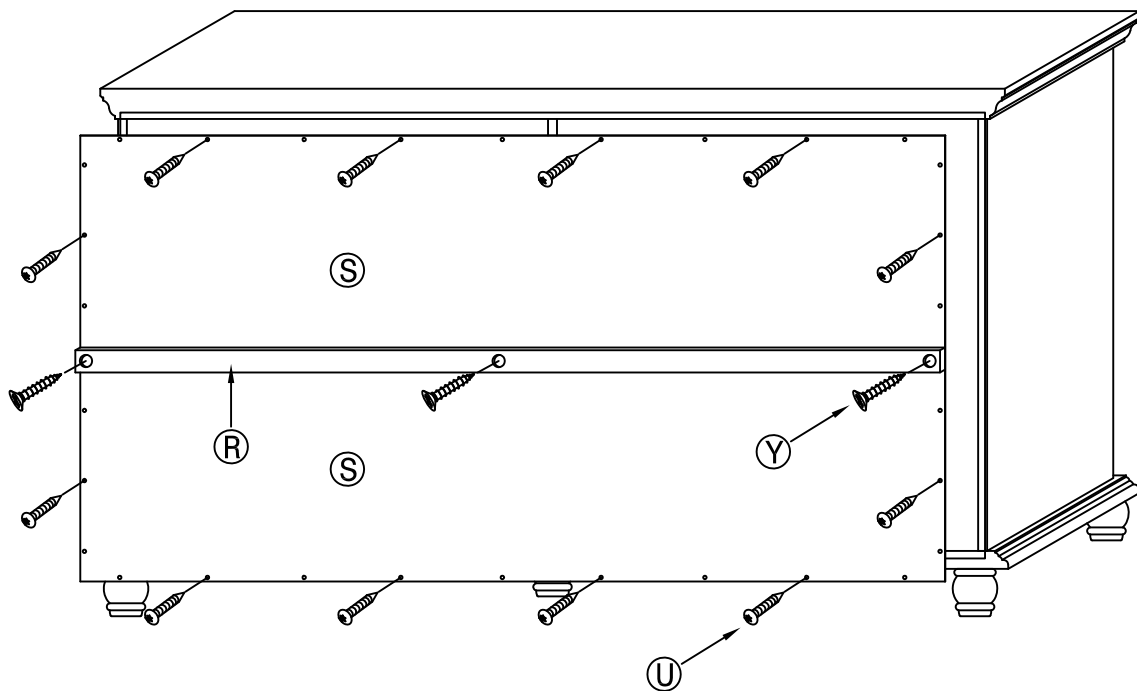

12) . ASSEMBLE THE BACK PANEL(S) .

- INSERT THE BACK PANEL(S) INTO SLOTS IN REAR PANEL GUIDE(R) .
- ATTACH THE BACK PANEL(S) AND REAR PANEL GUIDE(R) USING SCREWS(U/Y) .